


RF Handheld Remote

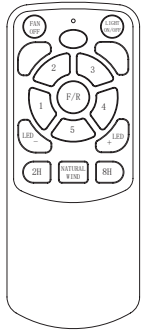

Model: 206637

Input: 2*1.5V, AAA battery (not included)

Compatibility:

Group#1:

- NOOSA Ceiling Fan with Light
- SEACLIFF Ceiling Fan with Light
- KURRAWA Ceiling Fan with Light
- SURF Ceiling Fan with Light
- CURRUMBIN Ceiling Fan (& light kit)

Group#2:

- Aloha Ceiling Fan (& light kit)
- Aruba Ceiling Fan (& light kit)

RF Remote Pairing

Single Fan Installation:

1. Connect wiring and switch the power supply ON
2. Within 30 seconds of the receiver being powered on (connected) aim the transmitter towards the receiver and press "FAN OFF" button for 10 seconds or until a beep sound is heard meaning pairing/syncing has been successful. **Note:** This must be done prior to fixing canopy in place.

Multiple Fan Installation:

Important: The pairing/syncing of each fan and remote MUST be done with all other fans disconnected from the power supply.

1. Fan #1 - Connect wiring and switch the power supply ON
2. Within 30 seconds of the receiver being powered on (connected) aim the transmitter towards the receiver and press "FAN OFF" button for 10 seconds or until a beep sound is heard meaning pairing/syncing has been successful. **Note:** This must be done prior to fixing canopy in place.
3. Disconnect fan #1 from the power supply.
4. Repeat steps 1-3 for each subsequent fan, ensuring that each additional fan is disconnected from the power supply before moving on to syncing the next fan.
5. Only once all fans have been paired/synced and successfully tested on separate remote-control transmitters, can all fans then be reconnected to power, and assembly of canopy completed.

De-pairing RF Remote From Fan

1. Power OFF the fan for more than 10 seconds
2. Power UP the fan again and within 5 seconds hold "speed 2" for 6 seconds; the fan will emit a beep for 1.5 seconds to confirm de-pairing is done

Note: These operations will wipe out ALL RF pairings from the fan, you will need to follow the initial setup and pairing instructions to re-pair again. This operation is only functional with product that has "2PD" on the rating label of the fan.

Remove/Reset Smart Enabled Ceiling Fan

1. Power OFF the fan for more than 10 seconds
2. Power UP the fan again and within 5 seconds hold button "8H" until a beep is heard.

Special Note

Group #1 models: Pressing and holding speed 1 will enter "Night Mode". A short press on all speed buttons will enter speed corresponding to button print.

Group #2 models: Pressing and holding speed 1 will enter speed 1. A short press on all speed buttons will enter a speed that 1 speed higher than button print, because group#2 are 6 speed models.