

## Installation Manual

### CELL-9

Date: 01/2021


| Variants     |              |              |              | Item No.           |
|--------------|--------------|--------------|--------------|--------------------|
| 60°          | 36°          | 24°          | 15°          |                    |
| <b>26980</b> | <b>26981</b> | <b>26982</b> | <b>26983</b> | <b>CELL-9-5CCT</b> |

Thank you for purchasing your new CELL-9-5CCT, Please take the time to read and understand the instruction sheet below. Failure to do so may void warranty.


### Specifications

|            |      |              |   |                 |            |
|------------|------|--------------|---|-----------------|------------|
| Voltage:   | 240V | Lumen (±5%): | Extra Warm White 2700K - 656lm<br>Warm White 3000K - 662lm<br>Neutral White 4000K - 717lm<br>White 5000K - 757lm<br>Extra White 5700K - 772lm | Dimmable:       | Yes        |
| Power:     | 9    | Beam Angle:  | 15°/24°/36°/60°   | Operating Temp: | -10 - 25°C |
| IP Rating: | IP44 | CCT:         | 2700K - 3000K - 4000K - 5000K - 5700K<br>(Switchable)   |                 |            |
| CRI:       | ≥80  | Lifespan:    | 50,000hrs   |                 |            |


1. Push the module into the fitting

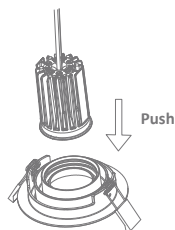


2. Connect the Driver

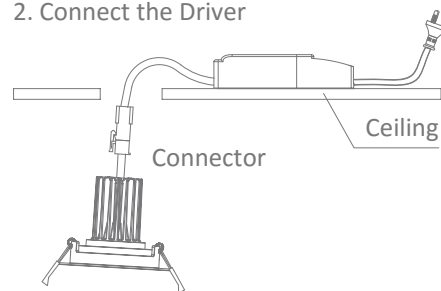



3. Straighten the springs into the ceiling

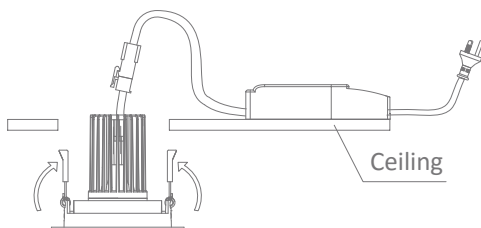

4.

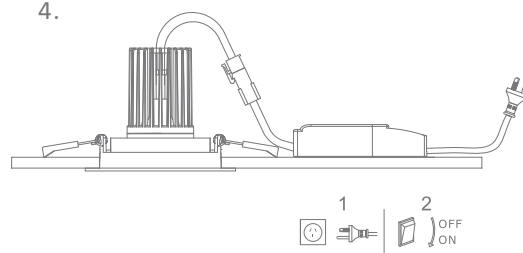

Minimum clearance distances to flammable building elements.

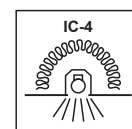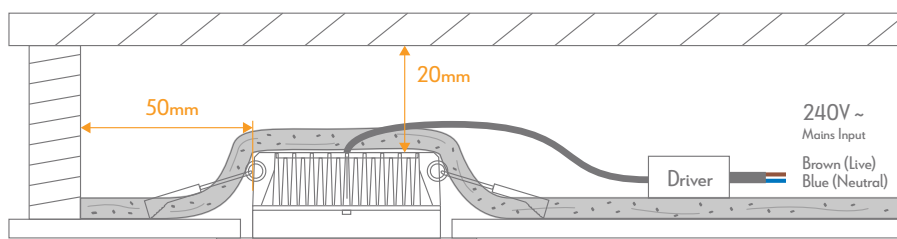

**Note:**

- The LED driver is NOT suitable for covering with insulation material.
- Warning-Risk of overheating or fire if the clearance distances are compromised.
- If the external flexible cable is damaged, it needs to be replaced by the manufacturer or his service agent.
- The light source of this luminaire is not replaceable; at the end of life the whole luminaire should be replaced.

**Note:** -The lamp must be installed by professional electrician  
-Ensure the power supply is switched off before fitting this product

-Do not touch the lamp when in use  
-Keep away from hot steam and corrosive gas