Ollo Recessed Step Light with Eyelid Installation Instructions

Ollo	o Recessed Step Light with Eyelid Ins	stallation Instructions \mathbb{Q}		
	Product Specifi	ications		
Model No.				
Name		Ollo		
Material		316 Stainless Steel		
Colour		Stainless Steel		
IP Rating		IP65		
Input Voltag	ige	240v AC		
Lamp Base		GU10		
Lamp Watta	age	1x 5w		
Colour Tem	וף TRI Co	TRI Colour - 3000k, 4000k, 5500k		
Lumens		270lm, 285lm, 300lm		
CRI		> 80		
Wiring		Parallel		
Dimmable		No		
Warranty		2 Years Replacement*		
Import	tant Safety Issues:	Dimensions		
 Modification of this product will void any warranty. Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system. When installing low voltage fittings, Voltage to fitting must be within +or- 5% of voltage required, if not within this allowance warranty will be voided. Aluminium and 304SS fittings must not be installed within 2km of any salt water environments. When installing copper fittings, gloves must be worn to avoid any oils transferring to fitting. All 316 & 304 stainless steel fittings must have regular cleaning maintenance to avoid any tea staining from forming on fitting. All o-rings and seals must be in place correctly to maintain warranty When installing surface mounted bollards, base plate must be installed on concrete or concrete pad, Fitting should not be installed under ground level, all holes including cable entry must be silliconed to prevent any water pentration into fitting, silicon must also be appiled around fitting at ground level. Failure to do this will void warranty This form may be updated at any time due to product improvements, please check online installation form for most current version. 		Cutout with Canister $\emptyset 87$ $\emptyset 63$ 125 100 125 067 CANISTER $\emptyset 87$ $\emptyset 63$ 13 78 5		
1. Makı 2. Makı 3. Inser 4. To cc neut 5. Strip 6. Sold 7. Cove 8. Heat 9. Colo mov 10. Reat 11. Inser	For Installation: A se sure that the electrical circuit is free of voltage (master switch off) see a hole where fitting is to be placed using dimensions provided on line drawings, making ert canister, and ensure that the top is level with wall. Failure to do so will void warranty. connect the cable, strip back cable on both fitting and cable run and twist the earths tog itral from fitting to neutral on cable run. to back the cable on both fitting and cable run, twist the earth cables together first, Then der all joins using solder and either a heat gun or butane gas torch. For connections using an adhesive lined heat shrink or gel cap to make connection water at the heat shrink or crimp the gel cap making sure all connections are covered. Four temperature is preset to 3000k, to change remove cover from fitting by twisting anti- ving switch on side of globe and reinsert globes into lampholders tach glass and then cover by turning clockwise making sure the seals are still in place ar ert fitting into canister. Apply silicon around edge of fitting to prevent any water from ge connections must be carried out carefully, inspect all contacts before switching back on the connections must be carried out carefully.	gether first, then positive cable from fitting to positive on the cable run. Then connect positive cables together and neutral cables together. rtight. Failure to do this will void warranty. clockwise and set aside. Remove globe and select desired colour temperature by nd cap is tight to avoid any water penetration. etting inside to electrical connections.		
Steps f	for Changing Globe:			
1. Rem 2. Re-ir	nove the cover by twisting anti-clockwise then glass and set aside, remove globe by pulli insert the appropriate globe by aligning the 2 pins of the globes into the lampholder and ke sure not to exceed may wattage see product label for correct info)			

(Make sure not to exceed max wattage, see product label for correct info)

Reattach cover by turning clockwise making sure the seals are still in place and cover is tight to avoid any water penetration. 3.

Must be installed by a licensed electrician

Contact Details:	Warranty Terms & Conditions*	Additional Information
143 Beauchamp RoadTel: 02 9381 83Matraville NSW 2036Fax: 02 9666 8AustraliaEmail: sales@hWeb: www.har	381 avit.com.au	