
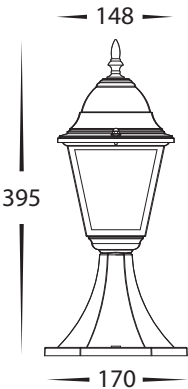
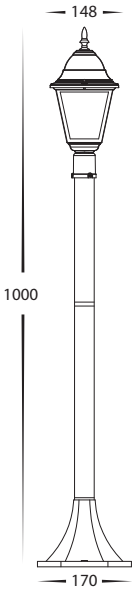
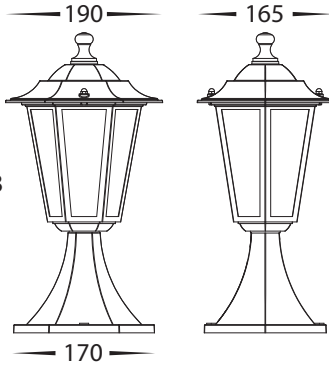


# Post and Pillar Light Installation Instructions

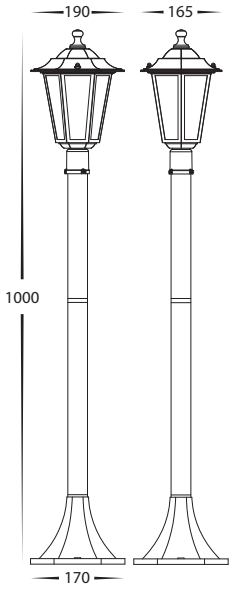

## Product Specifications

Model No.	HV1651W-BLK	HV1651W-P-BLK	HV1652W-BLK	HV1652W-P-BLK
Name	Newark		Fibra	
Material	Aluminium Body + Glass Cover		Aluminium Body + Glass Cover	
Colour	Black		Black	
IP Rating	IP44		IP44	
Installation Type	Ground - Surface Mounted		Ground - Surface Mounted	
Protection Class	1 (240v Requires Earth) ⚡		1 (240v Requires Earth) ⚡	
Input Voltage	240v AC		240v AC	
Lamp Base	E27		E27	
Lamp Wattage	1x 8w		1x 8w	
Colour Temp	2700k		2700k	
Lumens	700lm		700lm	
CRI	> 80		> 80	
Dimmable	Yes - Triac		Yes - Triac	
Warranty	3 Years Replacement*		3 Years Replacement*	

HV1651W-BLK Dimensions	HV1651W-P-BLK Dimensions	HV1652W-BLK Dimensions	HV1652W-P-BLK Dimensions
			

### Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- Aluminium and 304SS fittings must not be installed within 5km of any salt water environments.
- All o-rings and seals must be in place correctly to maintain warranty
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

### Steps for Installation:

1. Make sure that the electrical circuit is free of voltage (master switch off)
2. Locate cable for connection inside base of fitting.
3. Connect the cable - use wire with earth; connect the earth first, then live and neutral wire.
4. Make sure connections are weatherproof to avoid any water ingress into connections.
5. Install fitting in desired location using appropriate screws for application.
6. Apply silicon around edge of base to prevent any water from getting inside to electrical connections.
7. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

### Steps for Changing globe:

1. Make sure that the electrical circuit is free of voltage (master switch off).
2. Remove cover from fitting by removing screws on top of fitting and set aside.
3. Remove globe by twisting anti clockwise
4. Re-insert the appropriate globe by twisting clockwise into the lamp holder (Make sure not to exceed max wattage, see product label for correct info)
5. Reattach cover by reattaching nuts and tightening making sure the seals are still in place and cover is tight to avoid any water penetration.

## Must be installed by a licensed electrician

### Contact Details:

143 Beauchamp Road  
Matraville NSW 2036  
Australia

Tel: 02 9381 8300  
Fax: 02 9666 8881  
Email: sales@havit.com.au  
Web: www.havit.com.au

### Warranty Terms & Conditions\*



[www.havit.com.au](http://www.havit.com.au)

