


Lume Wall Light Installation Instructions



Product Specifications

Model No.	HV3512W-BLK	HV3512W-PB	HV3512W-WHT
Name	Lume		
Material	Polycarbonate		
Colour	Black	Brass	White
IP Rating	IP65		
Installation Type	Wall - Surface Mounted		
Protection Class	2 (No Earth Required) ☐		
Input Voltage	240v AC		
Lamp Base	E27		
Lamp Wattage	1x 8w		
Colour Temp	2700k		
Lumens	700lm		
CRI	> 80		
Dimmable	Yes - Triac		
Warranty	3 Years Replacement*		


Dimensions

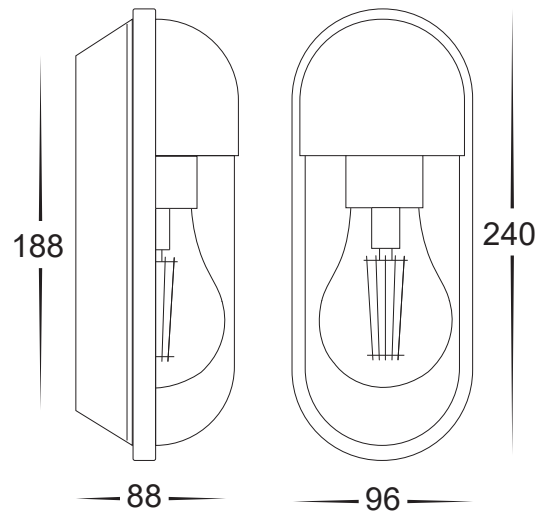

Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- Aluminium and 304SS fittings must not be installed within 5km of any salt water environments.
- Wear safety goggles while drilling or handling tools.
- Ensure that the installation area is free from obstructions and hazards.
- All o-rings and seals must be in place correctly to maintain warranty
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

Mounting Bracket Dimensions

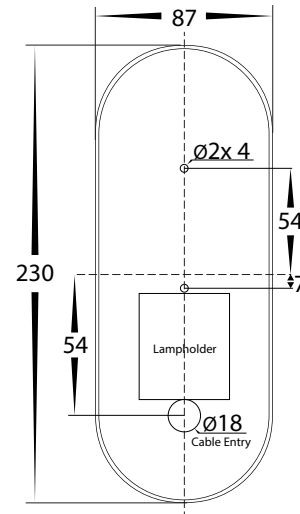

Steps for Installation:

1. Make sure that the electrical circuit is free of voltage (master switch off)
2. Carefully remove the fitting from the packaging.
3. Inspect the unit for any visible damage or missing parts. If there are any issues, contact Havit Lighting before proceeding.
4. Remove cover by pulling out on the 4x tabs located on side of cover.
5. Remove base plate from fitting.
6. Slide cable through cable gland and place base plate against wall
7. Attach base plate to wall using appropriate screws for application.
8. Seal all holes including cable entry and around screws.
9. Connect the cable - connect the live and neutral wire. (If cable from wall has an earth, Terminate and leave inside base plate.)
10. Check Globe is in correctly before reattaching covers onto baseplate, Make sure tabs have connected correctly onto base making sure the seals are still in place and cover is tight to avoid any water penetration. .
11. Apply silicon around edge of base to prevent any water from getting inside to electrical connections.
12. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Steps for Changing globe:

1. Make sure that the electrical circuit is free of voltage (master switch off).
2. Remove cover by pulling out on the 4x tabs located on side of cover.
3. Remove globe by twisting anti clockwise
4. Re-insert the appropriate globe by twisting clockwise into the lamp holder (Make sure not to exceed max wattage, see product label for correct info)
5. Reattach cover onto baseplate, Make sure tabs have connected correctly onto base, make sure the seals are still in place and cover is tight to avoid any water penetration.

Troubleshooting

1. If the unit does not power on, check all connections and ensure that the outlet is functional.
2. Check globe in inserted correctly into lampholder.
3. If Problems persists contact Havit Lighting on 02 93818300 or email sales@havit.com.au

Must be installed by a licensed electrician

Contact Details:

143 Beauchamp Road
Matraville NSW 2036
Australia

Tel: 02 9381 8300
Fax: 02 9666 8881
Email: sales@havit.com.au
Web: www.havit.com.au

Warranty Terms & Conditions*



www.havit.com.au

