


## Aries Wall Light Installation Instructions



			Produ	ct Specificatio	ns			
Model No.	HV3625T-BLK	HV3625T-WHT	HV3625T-PSS316	HV3625T-AB	HV3626T-BLK	HV3626T-WHT	HV3626T-PSS316	HV3626T-AB
Name	Aries							
Material	316 Stainless Steel							
Colour	Black	White	Polished	Antique Brass	Black	White	Polished	Antique Brass
IP Rating	IP65							
Protection Class	1 (240v Requires Earth)							
Input Voltage	240v AC							
Lamp Base	Built in LED							
Lamp Wattage	1x 6w				2x 6w			
Colour Temp	TRI Colour - 3000k, 4000k, 5500k				TRI Colour - 3000k, 4000k, 5500k			
Lumens	618lm, 824lm, 687lm				2x 618lm, 2x 824lm, 2x 687lm			
CRI	> 80							
Wiring	Parallel							
Dimmable	Yes - Triac Dimmable							
Warranty	3 Years Replacement*							

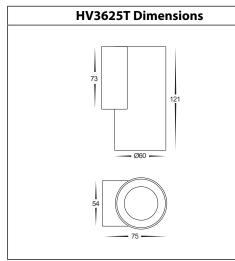

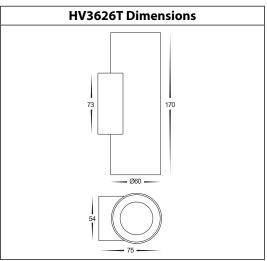

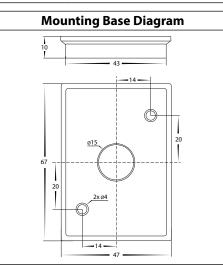

## **Important Safety Issues:**

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- All 316 & 304 stainless steel fittings must have regular cleaning maintenance to avoid any tea staining from forming on fitting.
   (Warranty does not cover Tea Staining)
- All o-rings and seals must be in place correctly to maintain warranty
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

## **Steps for Installation:**

- 1. Make sure that the electrical circuit is free of voltage (master switch off)
- 2. Loosen the allen screws from side of fitting.
- Remove base plate from fitting.
- 4. Install base plate to wall in desired location using appropriate screws for application.
- 5. Connect the cable use wire with earth; connect the earth first, then live and neutral wire.
- 6. Fitting is preset to 3000k, to change slide switch located inside base of fitting to desired colour temperature.
- 7. Reattach fitting to base plate making sure screws are tight to avoid any water penetration.
- Apply silicon around edge of fitting to prevent any water from getting inside to electrical connections.
- 9. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

## Must be installed by a licensed electrician

Contact Details:

143 Beauchamp Road Tel: 02 9381 8300
Matraville NSW 2036 Fax: 02 9666 8881
Australia Email: sales@havit.com.au
Web: www.havit.com.au





