


Otaner Wall Light Installation Instructions




Product Specifications

Model No.	HV3691T-BLK-240V	HV3691T-WHT-240V
Name	Otaner	
Material	Aluminium + Glass	
Colour	Black	White
IP Rating	IP54	
Installation Type	Wall - Surface Mounted	
Protection Class	1 (240v Requires Earth) 	
Input Voltage	240v AC	
Lamp Base	Built in LED	
Lamp Wattage	1x 10w	
Colour Temp	TRI Colour - 3000k, 4000k, 5500k	
Lumens	695lm, 730lm, 710lm	
CRI	> 80	
Dimmable	No	
Warranty	3 Years Replacement*	


Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- Aluminium and 304SS fittings must not be installed within 5km of any salt water environments.
- All o-rings and seals must be in place correctly to maintain warranty
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

Dimensions

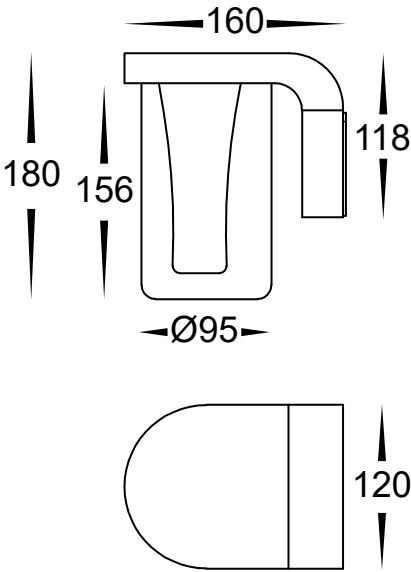

Mounting Base Dimensions

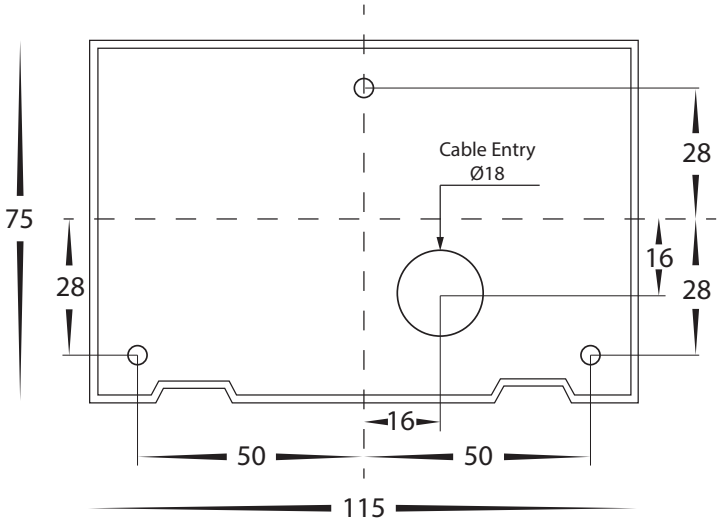

Steps for Installation:

1. Make sure that the electrical circuit is free of voltage (master switch off)
2. Loosen allen screws from side of fitting.
3. Remove base plate from fitting.
4. Slide cable through cable gland and place base plate against wall
5. Attach base plate to wall using appropriate screws for application.
6. Seal all holes including cable entry and around screws.
7. Connect the cable - use wire with earth; connect the earth first, then live and neutral wire.
8. Reattach fitting to base plate making sure seals are still in place
9. Tighten allen screws making sure these are tight to avoid any water penetration.
10. Apply silicon around edge of base to prevent any water from getting inside to electrical connections.
11. Fitting is preset to 3000k, to change remove glass by twisting anti clockwise, Slide switch located on PCB to desired colour temperature.
12. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Must be installed by a licensed electrician

Contact Details:

143 Beauchamp Road
Matraville NSW 2036
Australia

Tel: 02 9381 8300
Fax: 02 9666 8881
Email: sales@havit.com.au
Web: www.havit.com.au

Warranty Terms & Conditions*



www.havit.com.au

