 
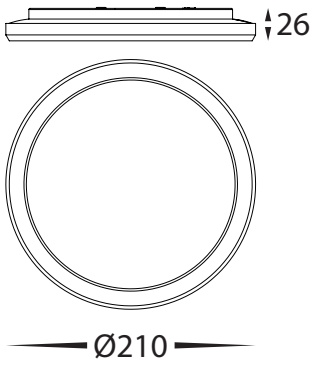 
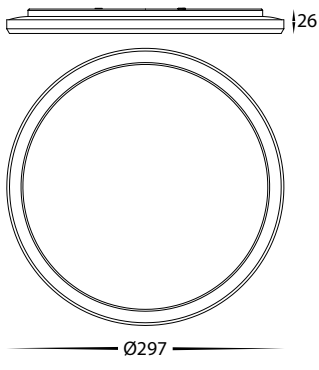 
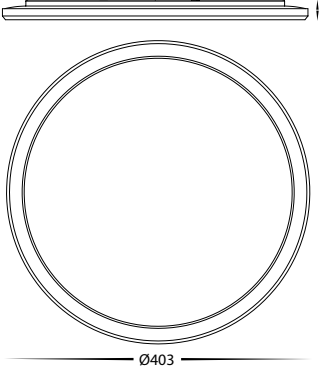 


Slim Oyster Ceiling Light Installation Instructions

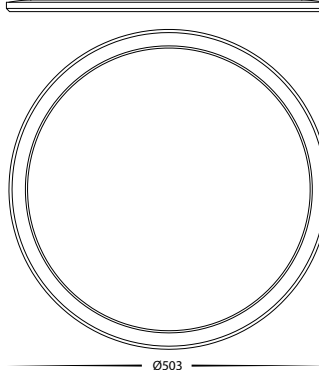

Product Specifications

Model No.	HV5876T-WHT	HV5877T-WHT	HV5878T-WHT	HV5879T-WHT
Name	Slim			
Material	Polycarbonate			
Colour	White			
Installation Type	Ceiling - Surface Mounted			
IP Rating	IP54			
Input Voltage	240v AC			
Protection Class	2 (No Earth Required) <input type="checkbox"/>			
Lamp Base	Built in LED			
Lamp Wattage	1x 16w	1x 24w	1x 30w	1x 40w
Colour Temp	TRI Colour - 3000k, 4000k, 5500k			
Lumens	1400lm, 1500lm, 1450lm	2000lm, 2100lm, 2200lm	2600lm, 2700lm, 2800lm	3600lm, 3700lm, 3800lm
CRI	> 80			
Dimmable	Yes - Triac Dimmable			
Warranty	3 Years Replacement*			

HV5876T-WHT Dimensions	HV5877T-WHT Dimensions	HV5878T-WHT Dimensions	HV5879T-WHT Dimensions
			

Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- Aluminium and 304SS fittings must not be installed within 5km of any salt water environments.
- All o-rings and seals must be in place correctly to maintain warranty
- If installed on surface other than ceiling eg. Wall, IP Rating downgrades to IP20.
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

Steps for Installation:

1. Make sure that the electrical circuit is free of voltage (master switch off)
2. Remove base plate from fitting by twisting anti clockwise.
3. Insert cable through centre hole of fitting
4. Install base plate to ceiling in desired location using appropriate screws for application.
5. Connect the cable - connect live and then neutral wire.
6. Fitting is preset to 3000k, to change slide switch located in base of fitting to desired colour temperature.
7. Reattach fitting to base plate twisting clockwise until fitting is locked into place.
8. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Male + Female Connector - Must not be Removed



Must be installed by a licensed electrician

Contact Details:

143 Beauchamp Road
Matraville NSW 2036
Australia

Tel: 02 9381 8300
Fax: 02 9666 8881
Email: sales@havit.com.au
Web: www.havit.com.au

Warranty Terms & Conditions*



www.havit.com.au

