

 
Ostron Oyster Light Installation Instructions




Product Specifications

Model No.	HV5887T-BLK	HV5887T-WHT	HV5888T-BLK	HV5888T-WHT	HV5889T-BLK	HV5889T-WHT
Name	Ostron					
Material	Aluminium + Polycarbonate Diffuser					
Colour	Black	White	Black	White	Black	White
Installation Type	Ceiling - Surface Mounted					
IP Rating	IP54					
Input Voltage	240v AC					
Lamp Base	Built in LED (Replaceable LED Panel)					
Lamp Wattage	1x 12w		1x 18w		1x 28w	
Colour Temp	TRI Colour - 3000k, 4000k, 5000k					
Lumens	545lm, 625lm, 585lm		855lm, 1040lm, 920lm		1605lm, 1925lm, 1814lm	
CRI	> 80					
Dimmable	Yes - Triac Dimmable					
Warranty	3 Years Replacement*					


HV5887T Dimensions

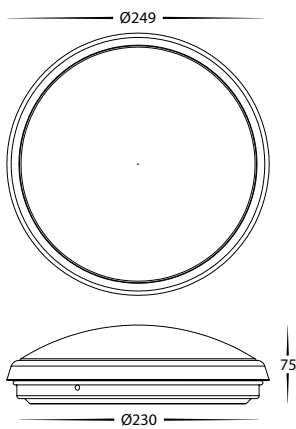

HV5888T Dimensions

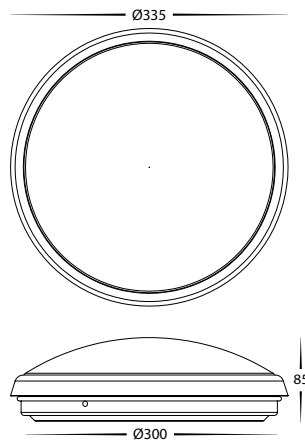 

HV5889T Dimensions

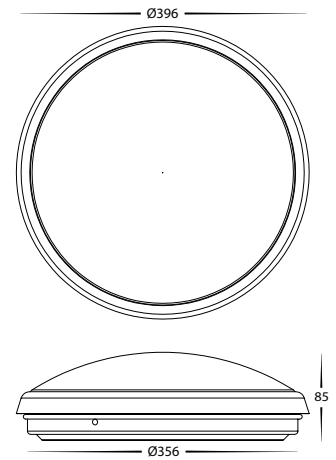 

Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- Aluminium and 304SS fittings must not be installed within 5km of any salt water environments.
- If installed on surface other than ceiling eg. Wall, IP Rating downgrades to IP20.
- All o-rings and seals must be in place correctly to maintain warranty
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

Steps for Installation:

1. Make sure that the electrical circuit is free of voltage (master switch off)
2. Remove base plate from fitting by twisting anti clockwise.
3. Insert cable through centre hole of fitting
4. Install base plate to ceiling in desired location using appropriate screws for application.
5. Connect the cable - use wire with earth; connect the earth first, then live and neutral wire.
6. Fitting is preset to 3000k, to change slide switch located on front of LED Panel to desired colour temperature.
7. Reattach fitting to base plate by twisting clockwise making sure cover is tight
8. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Steps for Replacing Panel:

1. Make sure that the electrical circuit is free of voltage (master switch off)
2. Remove cover from fitting by twisting anti clockwise.
3. Disconnect cable connector located on the side of the panel
4. Remove the 3 screws located on the inner side of panel
5. Reattach new panel and insert screws and tighten.
6. Reconnect cable connector.
7. Reattach cover to base plate by twisting clockwise making sure cover is tight.
8. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Must be installed by a licensed electrician

Contact Details:

143 Beauchamp Road
Matraville NSW 2036
Australia

Tel: 02 9381 8300
Fax: 02 9666 8881
Email: sales@havit.com.au
Web: www.havit.com.au

Warranty Terms & Conditions*



Additional Information

