


Auster Wall Light Installation Instructions



Product Specifications		
Model No.	HV8011S-BLKALB	HV8011S-GLDALB
Name	Auster	
Material	Iron	
Colour	Black	Gold
Installation Type	Wall - Surface Mounted	
IP Rating	IP44	
Input Voltage	240v AC	
Protection Class	1 (Earth Required)	
Lamp Base	Built in LED	
Lamp Wattage	1x 12w	
Colour Temp	5 Colour - 2700k, 3000k, 3500k, 4000k, 5000k	
Lumens	600lm, 610lm, 650lm, 640lm, 630lm	
CRI	> 80	
Dimmable	Yes - Triac Dimmable	
Warranty	3 Years Replacement*	

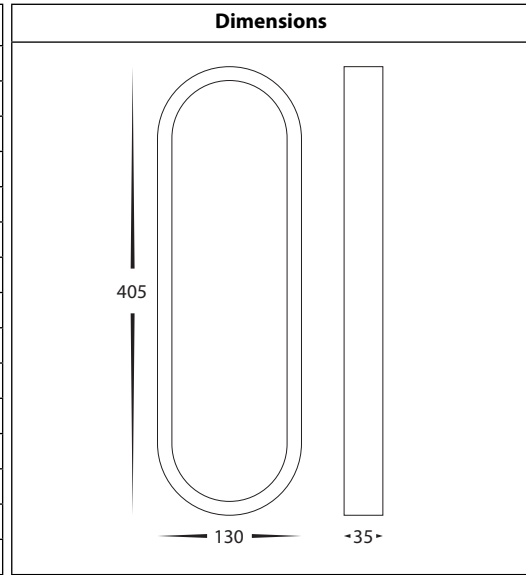

- Important Safety Issues:**
- This product must be installed by a qualified electrician according to AS/NZS 3000.
 - Ensure all electrical mains are disconnected before any installation.
 - Modification of this product will void any warranty.
 - Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
 - Aluminium and 304SS fittings must not be installed within 5km of any salt water environments.
 - All o-rings and seals must be in place correctly to maintain warranty
 - If installed on surface other than ceiling eg. Wall, IP Rating downgrades to IP20.
 - This form may be updated at any time due to product improvements, please check online installation form for most current version.



- Steps for Installation When using Mounting Bracket:**
1. Make sure that the electrical circuit is free of voltage (master switch off)
 2. Remove Mounting Bracket from back of fitting by undoing screws on side and set aside
 3. Install mounting bracket to wall in desired location using appropriate screws for application.
 4. Connect the cable - connect live and then neutral wire by inserting into orange connector and push cable until its locked into place. Gently pull on cable to make sure it doesn't come loose
 5. Fitting is preset to 3000k, to change slide switch located on back of fitting to desired colour temperature.
 6. Reattach fitting to mounting bracket and reinsert screws and tighten - Do not over tighten as this may cause damage to fitting
 7. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.



Must be installed by a licensed electrician

Contact Details:
 143 Beauchamp Road
 Matraville NSW 2036
 Australia
 Tel: 02 9381 8300
 Fax: 02 9666 8881
 Email: sales@havit.com.au
 Web: www.havit.com.au

Warranty Terms & Conditions*

www.havit.com.au