

### MOON WALL

 



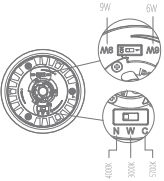
 

 
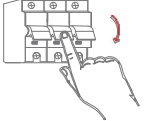
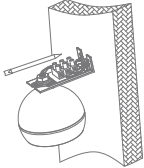
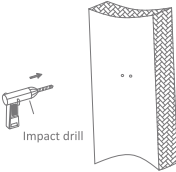
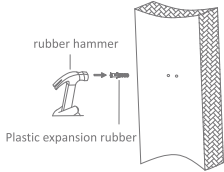
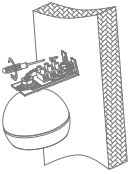
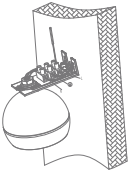
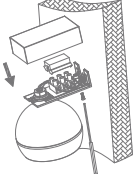
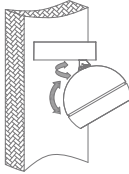
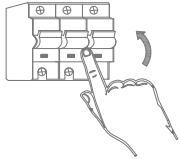
Variants		Item No.	Colour Temp
Blk	Wht		
22820	22821	MOON-WALL	TRIO
22822	22823		
22824	22825		
22826	22827		
			FLD
			OPAL
			SPOT
			TUBE

Thank you for purchasing your new MOON-WALL Light, Please take the time to read and understand the instruction sheet below. Failure to do so may void warranty.

### Specifications

Voltage:	240V	CCT:	3000K - 4000K - 5700K (Switchable)	Dimmable:	Yes	Lifespan:	50,000hrs
Power:	6/9W	IP Rating:	20	CRI:	>80		

Please refer to the data sheet for lumen output.

Optional Optics:				
01 Flood	02 Spot	03 Opal	04 Tube	
				
<p>1 Select suitable CCT / Power you need.</p> 	<p>2 Select the optics, then lock the safety wire.</p> 	<p>3 Rotate the optics on the LED engine in clockwise direction, make sure it was locked until you hear "click".</p> 	<p>4 Take out the faceplate.</p> 	
<p>5 Turn off the power.</p> 	<p>6 Use the faceplate to position on the wall.</p> 	<p>7 Drill the hole on the wall.</p> 	<p>8 Mounted plastic expansion screws.</p> 	
<p>9 Tighten the screws to fix the wall base.</p> 	<p>10 Connect L/N wires.</p> 	<p>11 Install the upper cover.</p> 	<p>12 Adjust the direction as required.</p> 	<p>13 Turn on the power.</p> 

**Note:** -The lamp must be installed by professional electrician  
-Ensure the power supply is switched off before fitting this product

-Do not touch the lamp when in use  
-Keep away from hot steam and corrosive gas