


LOI3001279A | Cambridge on Rod Set 3/4"

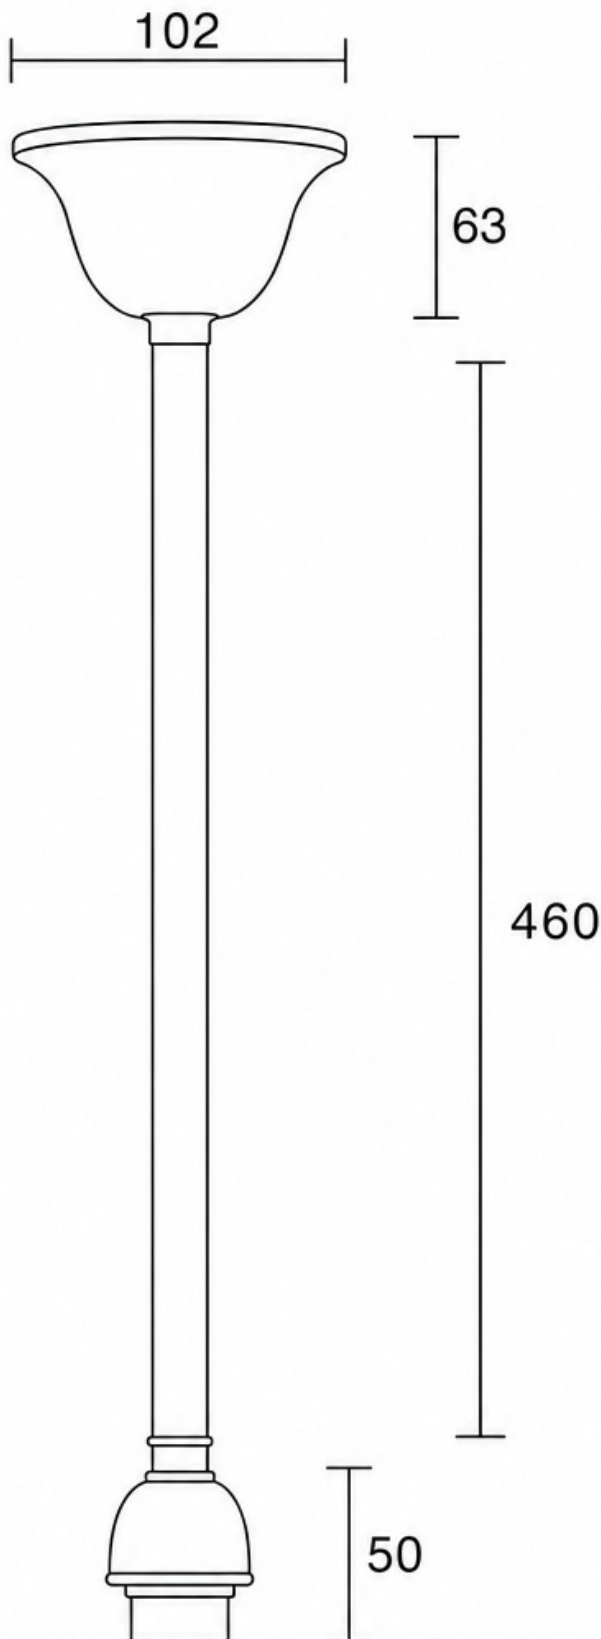

Our rod sections have a thread at either end. However, the top thread to sit inside the ceiling canopy is not required. If you need to shorten the rod prior to installation, it can be shortened from this end before starting the steps below.

Our rod sets are sold in 1/2m and 1m (2 piece) lengths. If you have purchased a 1/2m length, extensions can be purchased separately if a longer drop is required.

To assemble:

1. Loosen grub screw on ceiling canopy collar and slide down rod set.
2. Attach ceiling hook by screwing grub screw firmly into top of rod set. Brass is a soft metal; the grub screw attaches by clamping firmly into the brass without predrilling.
3. Ceiling hook has a lug to connect the earth.
4. Hang ceiling hook from hook attached to ceiling (not included).
5. Once rod is hanging, slide ceiling canopy up so it's flush with the ceiling and tighten grub screw on collar.
6. Unscrew the ring around the lampholder to attach a glass or gallery (the metal component with screws designed to attach a lampshade).

Care Instructions

- Tighten all components firmly by hand only. Do not overtighten.
- Assemble the fitting on a soft, clean surface to avoid scratching the finish.
- Take care not to mark the surface with tools or screws during installation.
- To clean, dust lightly with a dry cloth.

PRODUCT MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN IN ACCORDANCE WITH AS/NZ3000