

Split Inground Light Installation Instructions



	Product Specifications
Model No.	HV1847T
Name	Split
Material	316 Stainless Steel Face + Aluminium Body
Colour	Stainless Steel Face + Black Body
Installation Type	Ground - Recessed
IP Rating	IP67
IK Rating	IK10
Input Voltage	12v DC Constant Voltage - External Power Supply Required
Protection Class	3 (Low Voltage, no earth required) 🐠
Lamp Base	Built In LED
Lamp Wattage	1x 24w
Colour Temp	TRI Colour - 3000k, 4000k, 5500k
Lumens	1650lm, 1800lm, 1710lm
CRI	> 80
Wiring	Parallel
Dimmable	No
Warranty	3 Years Replacement*

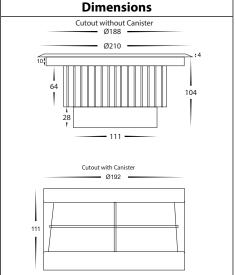

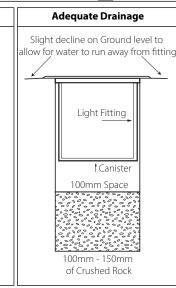

Important Safety Issues:

- · This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- · Modification of this product will void any warranty
- · Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- When installing low voltage fittings, Voltage to fitting must be within +or-5% of voltage required, if not within this allowance warranty will be voided.
- · Aluminium and 304SS fittings must not be installed within 5km of any salt water environments
- All 316 stainless steel fittings must have regular cleaning maintenance to avoid any tea staining from forming on fitting. (Warranty does not cover Tea Staining)
- · All o-rings and seals must be in place correctly to maintain warranty
- When installing inground light fittings, Adequate drainage must be allowed to prevent fittings from sitting in water for a long period of time, if no drainage is allowed, Warranty will be voided, See sample adequate drainage diagram for correct installation method.
- These fittings are supplied with an anti-syphon plug, This must remain on cable for warranty to be valid
- These fittings are supplied with a male + female connector for ease of replacement if fitting was to fail., This must remain on cable for warranty to be valid This form may be updated at any time due to product improvements, please check online installation form for most current version.

Steps for Installation:

- 1. Make sure that the electrical circuit is free of voltage (master switch off)
- Make a hole where fitting is to be placed using dimensions provided on line drawings, making sure adequate drainage is allowed.
- Insert canister, and ensure that the top is level with ground or floor. Failure to do so will void warranty.
- Using an appropriate 12v DC LED Driver DO NOT CONNECT LIGHT FITTING DIRECTLY TO 240V
- 5. Connect the cable If more than one fitting installed, wiring must be done in parallel.
- Strip back the cable on both fitting and cable run and twist the positive cables together. Then connect neutral cables together
- 7. Solder all joins using solder and either a heat gun or butane gas torch.
- 3. Cover connections using an adhesive lined heat shrink or gel cap to make connection watertight. Failure to do this will void warranty.
- 9. Heat the heat shrink or crimp the gel cap making sure all connections are covered.
- 10. Make sure the seals are still in place and screws are tight to avoid any water penetration.
- 1. Fitting is preset to 3000k, locate cap on bottom of fitting and remove by twisting anti clockwise, Slide switch to desired colour temperature, Reattach cap making sure it is tight.
- 12. Tighten cable gland on bottom of fitting before inserting fitting into canister
- 13. Insert fitting into canister. Apply silicon around edge of fitting to prevent any water from getting inside to electrical connections
- 14. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Steps for Installation: HV1847-F-SH

- Remove nuts on back of fitting and set aside
- 2. Remove cover and replace with security face
- 3. Reattach nuts and tighten making sure seals are still in place
- 4. Insert fitting into canister
- Insert screws and tighten





Must be installed by a licensed electrician

Contact Details:

143 Beauchamp Road
Matraville NSW 2036
Australia

Tel: 02 9381 8300 Fax: 02 9666 8881 Email: sales@havit.com.au Web: www.havit.com.au





www.havit.com.au

