


MODELS:

SOVLKBL - SOVEREIGN DC - Light Kit - Black








SOVLKWH - SOVEREIGN DC - Light Kit - White

WARNING: Always ensure the light-kit wiring is disconnected from the LED light panel before performing any work. Failure to do so may cause irreparable damage to your fan or light-kit assembly, which will void the manufacturer's warranty.

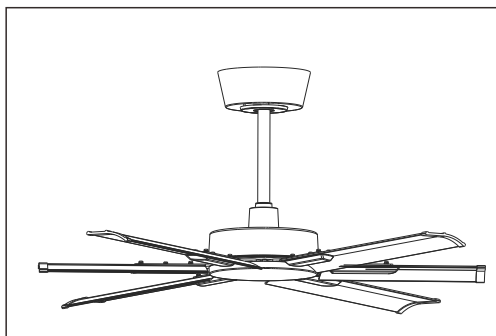

1. Remove the cover disc (if present) by gently pulling it downwards.
2. Slide Motor canopy upwards.
3. Turn the rubber plug on the motor shaft counterclockwise to remove it (let it hang by the cord).

4. Gently pull the two thin light wires (in the bottom of the downrod) outward to extend the length.
5. Push the wires downwards towards the shaft hole.
6. Now, you can easily pull out the light wires by gently tugging the wire connected to the rubber plug.

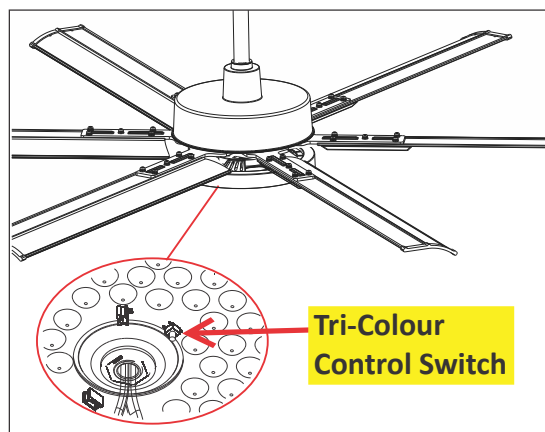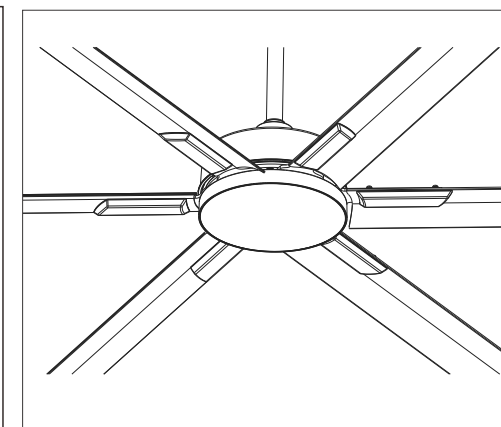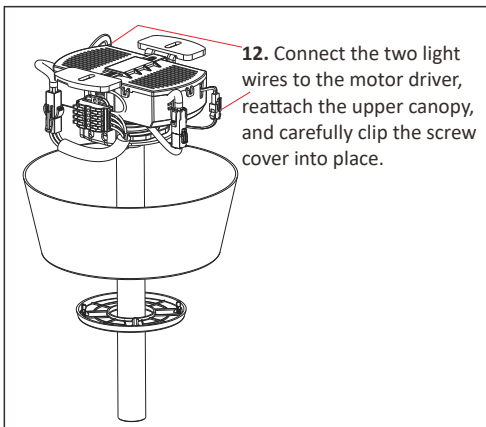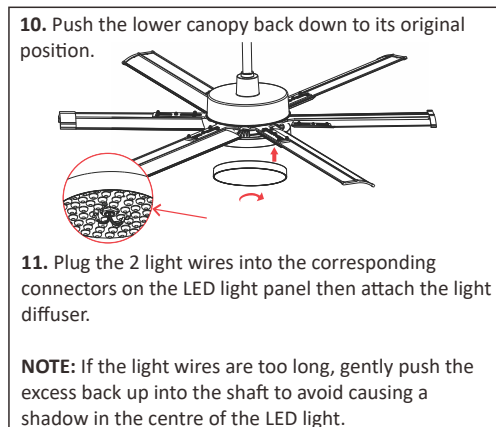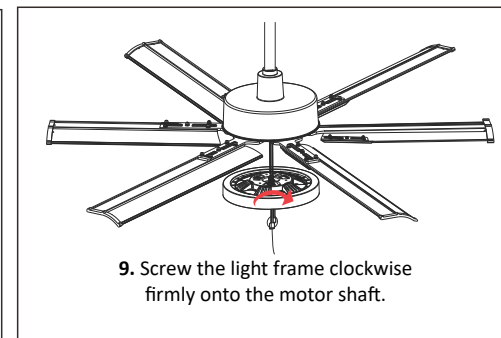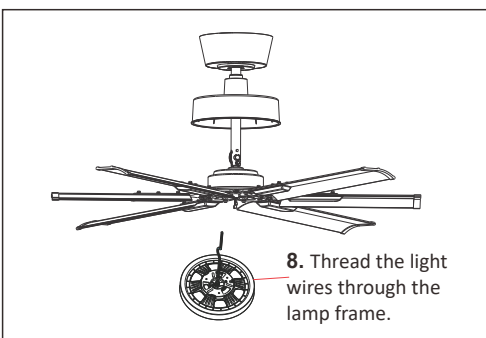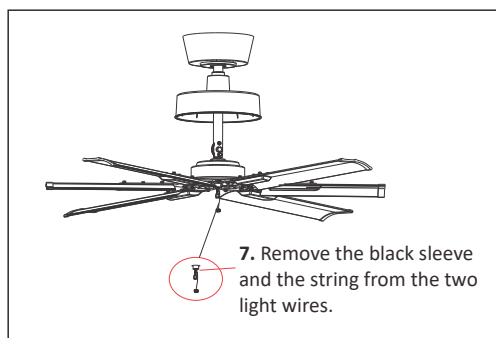

Sovereign light kits feature a CCT switch to change between three colour temperatures: Warm, Natural and Cool.

To access the tri-colour switch, twist the diffuser anti-clockwise to remove it. You must ensure only the clear diffuser turns during this process to avoid damaging the internal wiring.

Damage resulting from improper removal is not covered by the warranty. Once the switch is exposed, simply press the button on the LED panel to cycle through the three available light colours: Cool White, Natural, and Warm.

**Tri-Colour
Control Switch**



NOT FOR DIY
PROFESSIONAL INSTALLATION REQUIRED

Installation to be performed by a qualified electrician.

OPERATING INSTRUCTIONS

STEP DIMMING USING THE INCLUDED REMOTE CONTROL.

1.  Fan Off (light remains unchanged)
2.  Light ON/OFF.
3.  Adjust light colour (Cool, Natural and Warm).
4.   Adjust the light intensity up to maximum brightness.
 Adjust the light intensity down to minimum brightness.
(Remote Dimming: 9 Levels)

STEP DIMMING USING THE OPTIONAL WALL CONTROL

1. Flick light switch to 'ON' - Light will be at 100% brightness.
2. With the light on, flick the switch 'OFF' then 'ON' again within 2 seconds, Light will be at 75%.
3. Repeat the same process and the light will continue to dim to 50% then 25% and finally back to 100%.

NOTE: If the light switch remains 'OFF' for more than 2 seconds, the light will operate at its previous setting when next operated.

Switch Dimming: 4 Levels

SPECIFICATIONS:

Colour Temperature (K)	3000K	4000K	6000K
Lumens	2189 lm	2206 lm	2183 lm

Refer to the Sovereign DC fan instruction manual for additional information.

COMPATIBLE WITH: SOV1506WH, SOV1506BL, SOV1806WH, SOV1806BL

WARRANTY

OUR GOODS COME WITH GUARANTEES THAT CANNOT BE EXCLUDED UNDER THE AUSTRALIAN CONSUMER LAW. YOU ARE ENTITLED TO A REPLACEMENT OR REFUND FOR A MAJOR FAILURE AND COMPENSATION FOR ANY OTHER REASONABLY FORESEEABLE LOSS OR DAMAGE. YOU ARE ALSO ENTITLED TO HAVE THE GOODS REPAIRED OR REPLACED IF THE GOODS FAIL TO BE OF ACCEPTABLE QUALITY AND THE FAILURE DOES NOT AMOUNT TO A MAJOR FAILURE.

BEFORE INSTALLATION: Check all components to ensure there is no visible damage. Should there be any damage, contact Ventair support via email: support@ventair.com.au or ph: (03) 9775 0556 to discuss.

WARRANTY PERIOD: This product is covered against manufacturing defects by a two (2) year limited warranty. During this period Ventair will, at our discretion, supply parts or provide a replacement unit of the same or comparable model. The Customer must, within 7 days of detection of the alleged fault contact Ventair.

IN HOME WARRANTY SERVICE: Not applicable.


COMMERCIAL USAGE:

- This product has a maximum one (1) year warranty when used in a commercial setting.
- The Ventair warranty Terms & Conditions available at www.ventair.com.au/warranty must be met.
- The unit or relevant part must not have been physically damaged, involved in an accident, modified, subject to misuse, neglect or abuse.
- Fault must not be the result of normal wear and tear.
- The product must be installed by a licensed electrical contractor (where applicable) and in accordance with the instruction manual using the supplied Ventair hardware.
- If you suspect a manufacturing defect, lodge a warranty claim by visiting www.ventair.com.au/warranty


You will need to provide the following information:

- Proof of purchase
- The nature of the fault
- The brand, model number and colour of the unit
- The owner's name, address and contact number
- Supporting evidence
- Certificate of electrical safety (if requested)

SDCRC

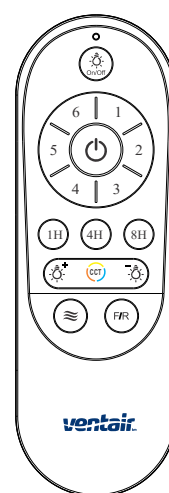

SDC3SPWC

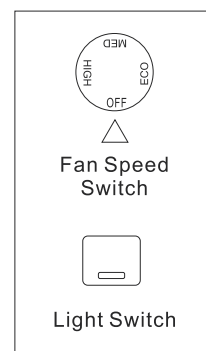

CONTACT US:

Email: support@ventair.com.au
4 Capital Place, Carrum Downs,
VIC 3201 Australia
PH: (03) 9775 0556
<https://ventair.com.au/>